

Operating Instructions

Signoscope®

Congratulations!

Buying a SAFE SIGNOSCOPE is an excellent decision and a superb choice!

The SIGNOSCOPE shows you watermarks sharply defined and full of contrast. You will discover the watermark not visible with either lighter fluid or any other "dry" Watermark Detector!

The SIGNOSCOPE is the only instrument which will effectively reveal the exact watermark in postage stamps (up to size approx. 2"x2") without the use of ANY chemical aids, and without endangering your stamps.

But that's not all: Within seconds, the SIGNOSCOPE will show you the difference between two seemingly identical stamps. You can also determine the true condition of the stamp, detect thin places, grills, irregular papers, repairs and forgeries, as well as spot silk threads, granite paper, the fiber of the stamp, and other interesting "finds" in your collection. Especially useful for checking watermarks on yellow or orange stamps. Before starting your search, we recommend reading the following pages. You will then be able to enjoy your SIGNOSCOPE even more.

SAFE Publications, Inc.
P.O. Box 263
Southampton, PA 18966 - USA

Helpful HINTS for the operation of the SIGNOSCOPE

- 1** Do not check used and mint stamps together. The difference in the paper thickness can affect the result.
- 2** Used stamps should be off the paper. They should be free of all hinge, gum, and paper remnants.
- 3** Freshly washed stamps have to be completely dry before being placed in the SIGNOSCOPE.
- 4** When checking mint stamps with a hinge, we recommend inserting the stamp in such a way as to have the hinge or hinge remnant outside of the projection glass.
- 5** Watermarks will show up "dark" in the SIGNOSCOPE (most catalogs show the watermarks incorrectly as white, which actually is the negative).
- 6** The watermark will not always be visible and full of contrast as shown in a catalog - a stamp may only show part of a watermark. Remember, you will be looking at a watermark and not a print.
- 7** When checking stamps with a very weak watermark, we recommend to examine the stamp in different positions, i.e. turning them 90 or 180 degrees.

 
 
8 When checking the watermark make sure not to allow too much outside light into the viewing tower.

9 Very important is the light intensity. Sometimes you can get a better result with a weaker light.

10 The sliding tray (projection glass and metal plate) is to be kept free from dust and dirt at all times. Handle with care! We recommend the Dustcover (supplied as an option).

Lift up projection glass and insert stamps between glass and metal plate. When checking watermark, place stamp face down in the center of the sliding tray. For checking other items you might want to place the stamp face up in the sliding tray.

Pull out sliding tray to insert stamp.

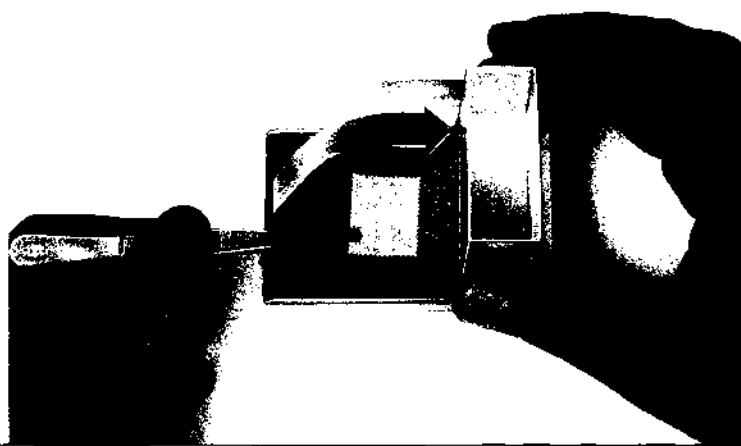
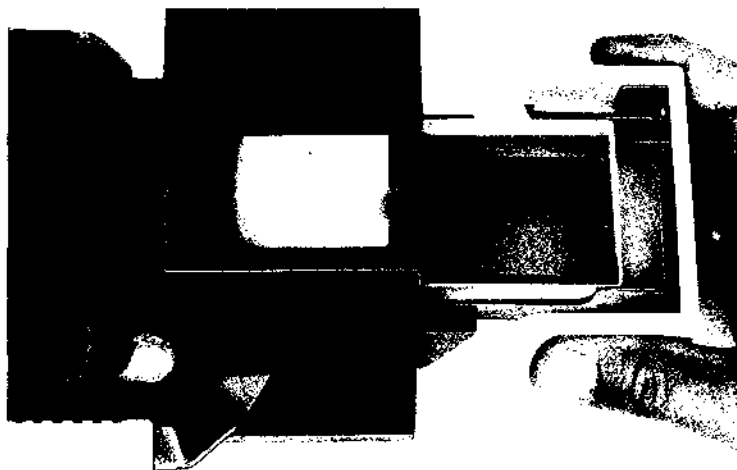


Push sliding tray all the way in.

Turn on light.
(If light does not work, check for loose light bulb; follow instructions on last page or follow instructions for AC Adapter).
Push position lever (handle) towards back of unit but **ONLY** until the stamp area is fully lighted. The watermark, if present, will now appear. Note: Pushing the handle further back will **NOT** give better results - sometimes just the opposite.

Adjust the light intensity with the Contrast Adjuster.

  When checking stamps with a very weak watermark we recommend placing one of the enclosed vinyl spacers (use the clear **VINYL ONLY**, NOT the **PAPER** on the back of the stamp (between stamp and projection glass) **shiny side UP**. The watermark will then appear with more contrast.

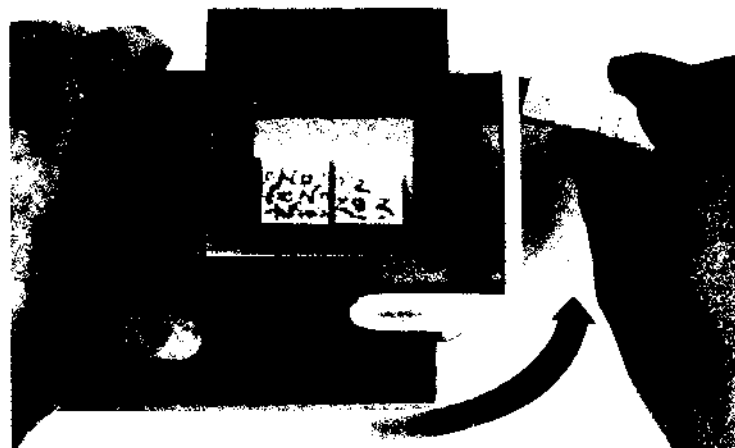
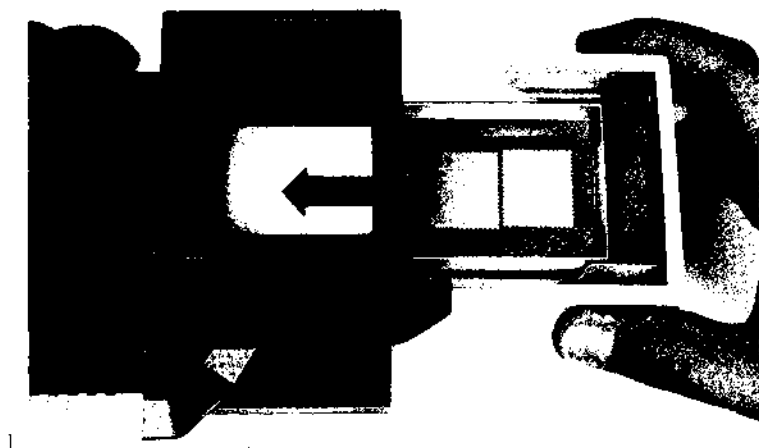


The SIGNOSCOPE has been adjusted at the factory for a stamp of medium thickness. When examining very thin or very thick stamps, or when using the vinyl spacers, it might be necessary to adjust the position lever (handle) as follows: Loosen screw at the bottom of the unit with the wrench supplied. Pull handle forward until disengaged. While holding handle, turn disc in back of viewing tower to the left or to the right, one or two revolutions.



For very thin stamps turn to the right (clockwise). For very thick stamps turn to the left (counter-clockwise). Push handle back in, until engaged. Re-tighten screw.

  If unit is operated with batteries, use 5 "AA" batteries. Open battery compartment at the bottom of the SIGNOSCOPE. Remove battery case and insert batteries (note polarity as shown). Replace battery case and close battery compartment. Please note: When batteries are used the SIGNOSCOPE will only operate properly for as long as the batteries are fully charged. Use Alkaline batteries for long-life operation. It is recommended to turn off the unit immediately after checking for watermarks.

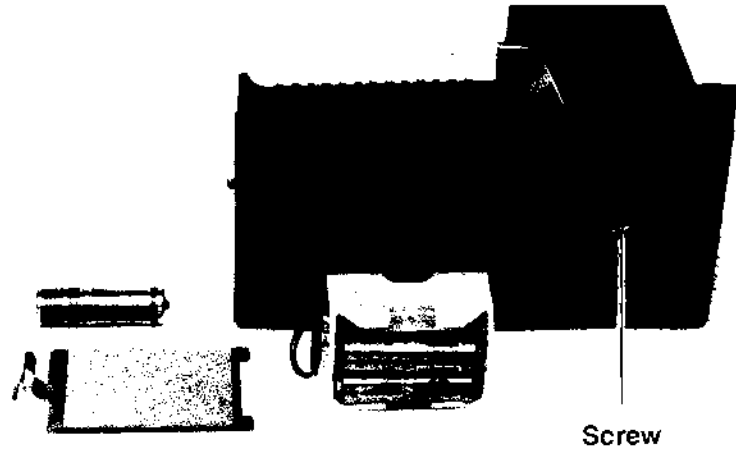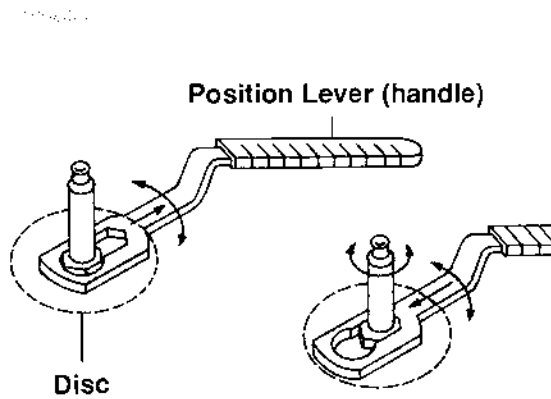

If AC Adapter is used (supplied as an option), place small DC power plug into the 7V outlet of the SIGNOSCOPE (make sure plug is properly engaged) and insert adapter in any household outlet. Please note: The SIGNOSCOPE switches automatically from battery operation to AC operation as soon as the small DC power plug is inserted into the unit. If you do not use the batteries for an extended period of time, we recommend removing the batteries from the SIGNOSCOPE.

DC Power Plug
On-Off Switch
Contrast Adjuster



Position Lever

The light bulb will last approx. 1000 hours. (Replacement bulbs are available from us). Should the bulb need to be replaced, place the plastic tube supplied with each SIGNOSCOPE over the light bulb and remove the light bulb by turning to the left. Replace the new light bulb the same way by turning to the right.

Please note: It is possible that the light bulb does not work because of being loose due to transport vibration. Just follow above steps for tightening the light bulb.

© 1985 SAFE Publications, Inc.

